






Step 1: Select items

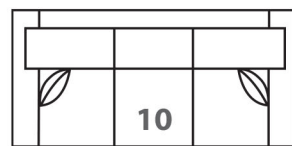


-10 Bungalow Sofa
Outside: 81W Inside: 63W
COM: U

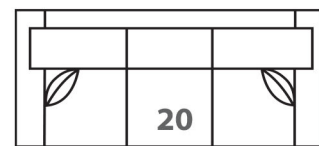


-20 Sofa
Outside: 89W Inside: 71W
COM: W

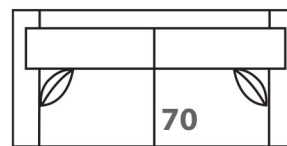


-70 Sofa (2 Cushion)
Outside: 81W Inside: 63W
COM: U

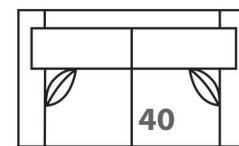

-40 Loveseat
Outside: 65W Inside: 47W
COM: S

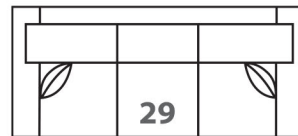

-29 Queen Sleeper
Outside: 88W Inside: 69W Depth: 38
COM: V

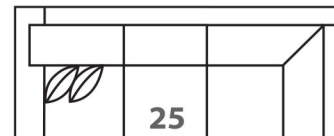


-25 Left Arm Corner Sofa




-24 Right Arm Corner Sofa


One Arm Corner Sofa
Outside: 96W
Inside: 67W
COM: Y

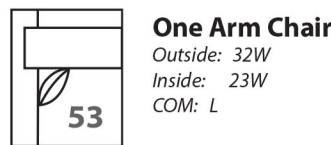


-53 Left Arm Chair

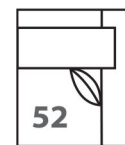

-52 Right Arm Chair

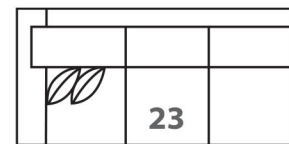


-23 Left Arm Sofa

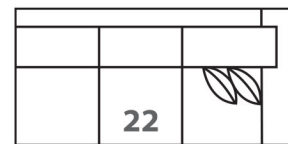


-22 Right Arm Sofa


One Arm Sofa
Outside: 79W
Inside: 70W
COM: T

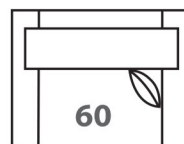


-60 Chair & 1/2
Outside: 51W
Inside: 33W
COM: P

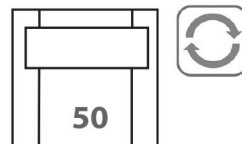


-50 Chair -56 Swivel Chair (A or G Base Only)
Outside: 42W Inside: 24W
COM: N



-51 Armless Chair
Outside: 24W
Inside: 24W
COM: I

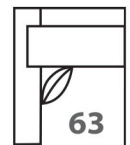


-63 Left Arm Chaise

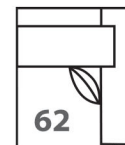

-62 Right Arm Chaise

One Arm Chaise
Outside: 65D 32W
Inside: 48D 23W
COM: N




-64 Ottoman & 1/2
Outside: 18H 25D 39W
COM: F



-55 Ottoman
Outside: 18H 27D 30W
COM: E




-43 Left Arm Loveseat

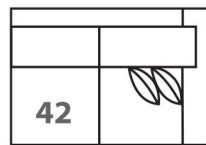


-42 Right Arm Loveseat


One Arm Loveseat
Outside: 56W
Inside: 47W
COM: P

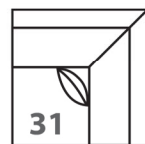

-31 Square Corner
Outside: 39W
Inside: 21W
COM: M

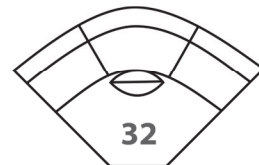

-32 Round Corner
Outside: 73W
Inside: 17W
COM: O
Wall Depth: 50

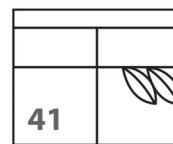

-41 Armless Loveseat
Outside: 48W
Inside: 48W
COM: L

Step 2: Select base



(A) Skirted Base



(C) Block Leg




(D) Bun Foot




(G) Upholstered Base

Step 3: Select arm

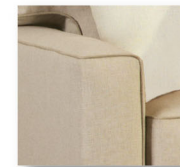

Modern Track Arm
Reduces outside width by 3" per arm

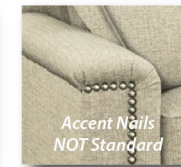

Padded Track Arm
Reduces outside width by 2" per arm




Panel Arm



Pleated Arm



Sock Arm

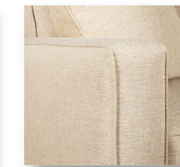

Track Arm
Reduces outside width by 3" per arm

Step 4: Select back



Bed Pillow Back



Box Border Back



Knife Edge Back



Modern Box Border Back

Drawings NOT to scale. All dimensions listed are approximate.

2053 Series

Overall Height	Overall Depth	Inside Depth	Arm Height	Seat Height	Seat Cushion
38	39	21	26	20	HR

Standard: Loose Pillow Back / 19" Throw Pillows

Number of standard throw pillows represented in illustration

Width measurements based on widest arm style, the Panel/Pleated/Sock Arm. Overall width will vary by style option: Track & Modern Track - 3" per arm, Padded Track - 2" per arm. Seating area dimensions are not affected by arm choice.